

# Thank you for purchasing the **LEDGEGRIP™**.

## Please read all warnings and instructions before use.

### California:

#### **⚠ WARNING**

“Children are attracted to and can operate firearms that can cause severe injuries or death. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.”

#### **⚠ ADVERTENCIA**

“A los niños los atraen las armas de fuego y las pueden hacer funcionar. Ellos pueden causarse lesiones graves y la muerte. Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente, le pueden dar una multa o enviarlo a la cárcel.”

### **Disclaimer**

It is the responsibility of the end user to exercise due diligence by learning and understanding all local, state and federal firearms laws in order to comply with them.

Please see reverse for **LEDGEGRIP™** assembly instructions.

For Video Demonstration of **LEDGEGRIP™** Installation go to [www.bande3d.com](http://www.bande3d.com) and click on the Instructions tab or visit [www.youtube.com/ledgegrip](http://www.youtube.com/ledgegrip)

Correct buffer tube alignment for installation of stock blocking portion of the **LEDGEGRIP™**.




**ATTENTION!!**

Before installation make sure gun is not loaded and is safe to work on

DO NOT Force Stock Block portion of the LedgeGrip onto your firearm. It should slide on easily.

Incorrect buffer tube alignment for installation of stock blocking portion of the **LEDGEGRIP™**.

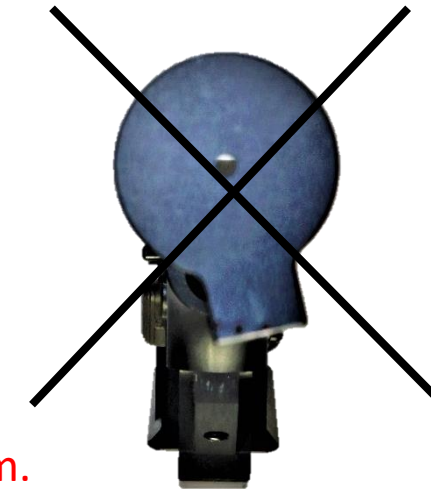

### **LEDGEGRIP™ Installation Sequence**

1. After safety detent pin and spring are installed, secure lower portion of the LEDGEGRIP™ to the AR Lower with Allen bolt.
2. Once lower grip is secure, slide upper stock blocking piece onto buffer tube and onto lower grip rail.
3. Next, slide buttstock onto buffer tube until locked in place.

